


# RS232/RS422 Multiplexer

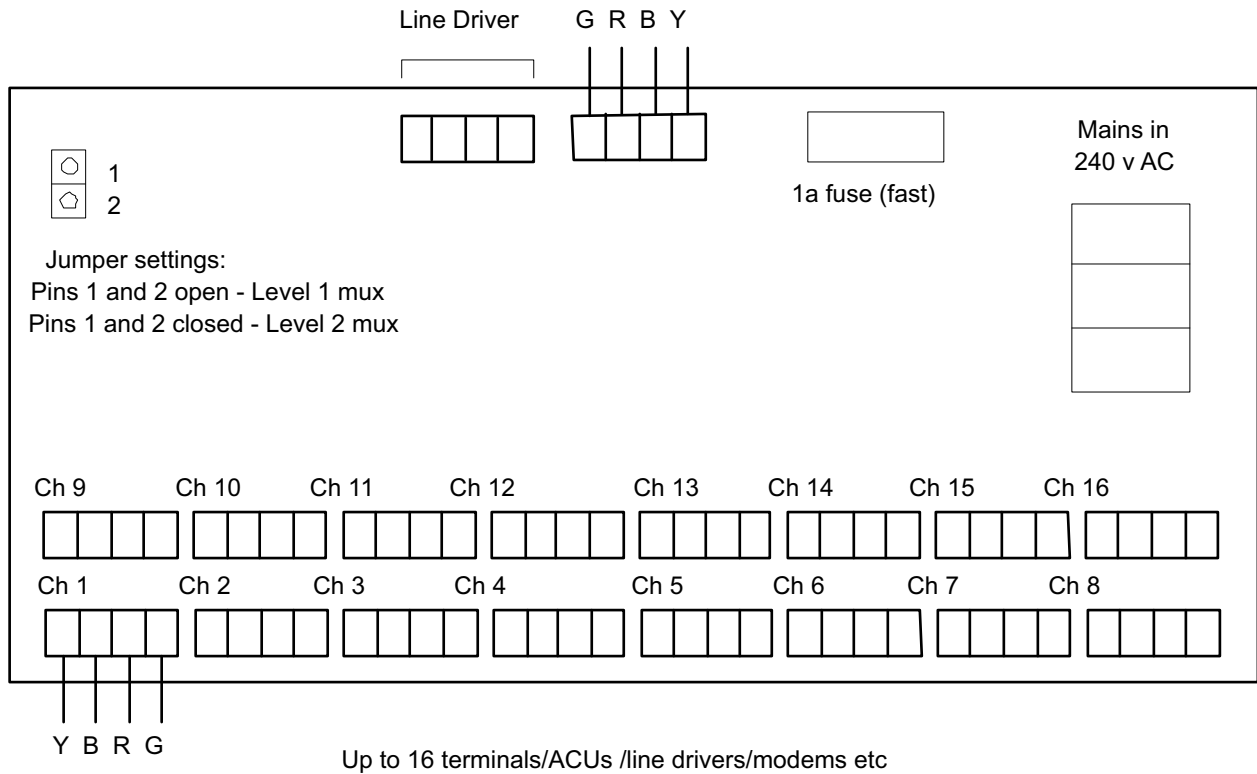

Y (yellow) should not be connected  
when wiring to terminals