

External weigand/wiegand format Reader (swipe or proximity)

Note 1:
When using a weigand reader
the internal mag swipe reader must
be disconnected

