


# Typical External-serial Barcode wand

Serial Barcode-wand  
Reader

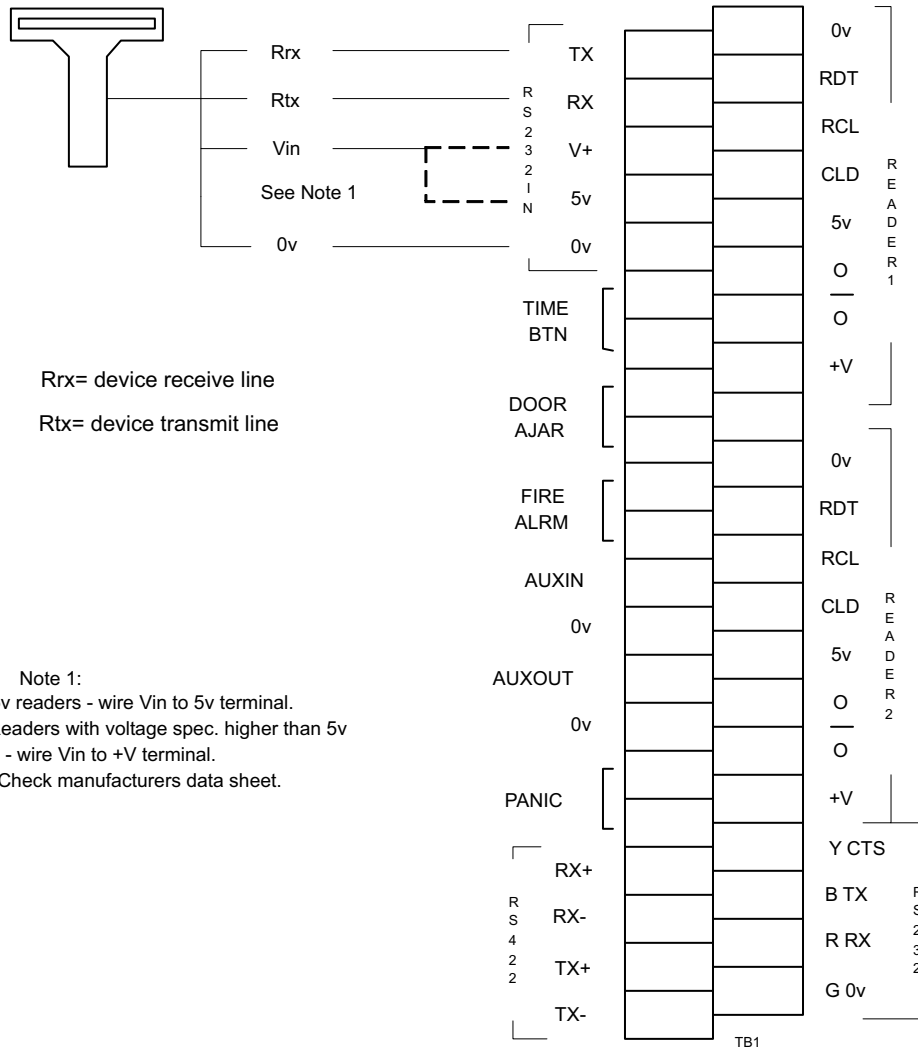

Rrx= device receive line  
Rtx= device transmit line

Note 1:  
5v readers - wire Vin to 5v terminal.  
Readers with voltage spec. higher than 5v  
- wire Vin to +V terminal.  
Check manufacturers data sheet.