
 



Location of RS232 and RS422 ports

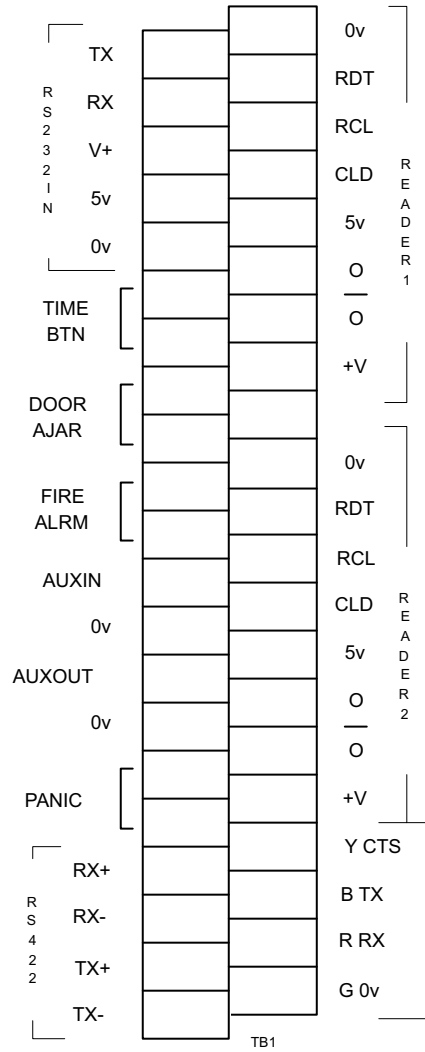

Connect here for RS 422 comms



 Note:
This port (RS422) is only used when a Line Driver is required. See text for further information.



Connect here for RS 232 comms