External Mag-stripe/Proximity Reader (ABA Track 2 configuration)

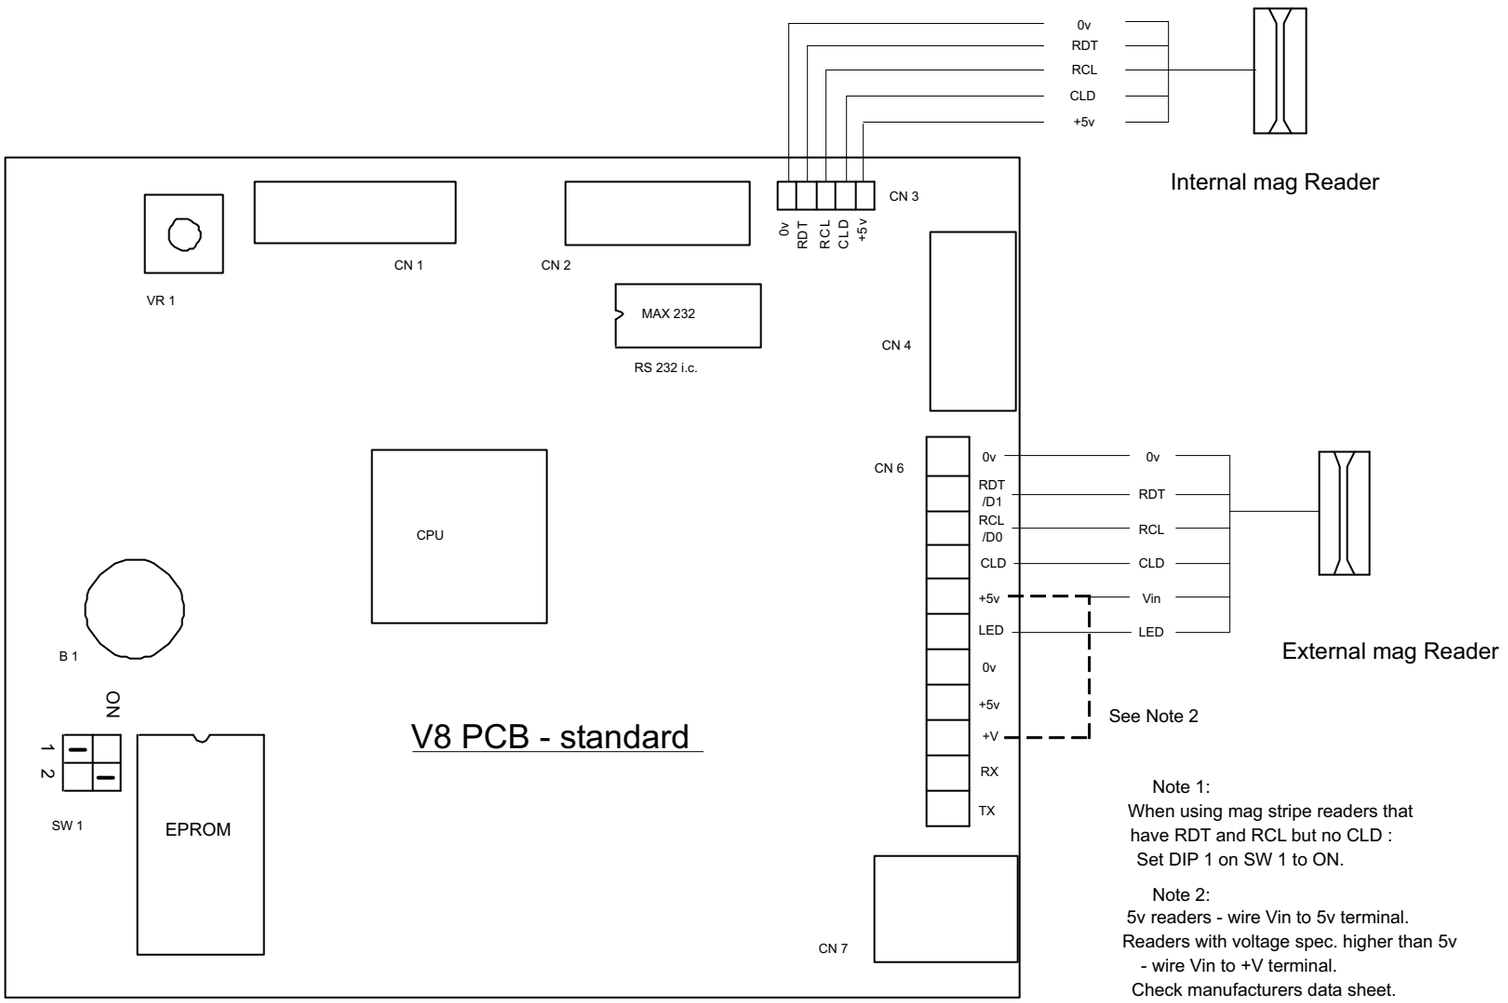

Note 1:
When using mag stripe readers that have RDT and RCL but no CLD :
Set DIP 1 on SW 1 to ON.

Note 2:
5v readers - wire Vin to 5v terminal.
Readers with voltage spec. higher than 5v - wire Vin to +V terminal.
Check manufacturers data sheet.

da/v8/1002